

SANY

SY135C

TRACKED EXCAVATOR

QUICK START GUIDE



VERSION 1 08.2026

GENERAL GUIDANCE

This quick start guide and its contents have been prepared by SANY and, while deemed to be accurate, are based on technical information provided for equipment designed, manufactured, and tested by SANY. This guide does not replace the operator manual or any formal training.

It is the responsibility of the owner, user, properly trained operator, and lessor to be knowledgeable of, and comply with, all industry standards, government regulations, workplace rules, and other directives that may govern and/or apply to this equipment as well as its environment/conditions of use.

CONTENTS

Warranty, Service and Parts Information	Page 2
Display	Page 3
Work Modes	Page 4
Quick Hitch Process (PT 1)	Page 5
Quick Hitch Process (PT 2)	Page 6
Tool Selection	Page 7
Emergency Stop Switch	Page 8
Exhaust Regeneration	Pages 9-10
Manual Regeneration	Page 11
Service Intervals Guide	Pages 12-13

SY135C QUICK START GUIDE

SY135C DISPLAY



1. GPS Active
2. Fuel Level
3. Buzzer Cancelled
4. Work/Throttle Indicator
5. Time/Date
6. Automatic DPF Regen
7. DPF Regen Inhibit Warning
8. Engine Fault Warning
9. Engine Pre Heat
10. Engine Stop Warning
11. Engine Torque De-rate
12. Engine Torque De-rate 25%
13. Engine Torque De-rate 75%
14. Work Mode
15. Daily Work Hours
16. AdBlue Tank Level
17. AdBlue Tank Level Below 2%
18. Manual DPF Regen Warning Lamp
19. Adblue Level Below 10%
20. Battery Charge Warning
21. Aftertreatment Error
22. SWL Alarm
23. Engine Coolant Temperature
24. Throttle Position
25. Total Work Hours
26. Service Menu
27. Automatic Idle
28. Travel Speed
29. Main Menu

SY135C QUICK START GUIDE

WORK MODES



1. The machine work mode is enabled by selecting the desired mode on the touch screen display.
Press the mode select icon to cycle through options.


Work Mode	Operation
S	Standard / Normal operation.
H	Heavy Duty Mode. For when additional power is required for heavy applications. Power Boost.
L	Light Duty / Lifting. For when fine control is required.
B	Breaker. This mode prioritises hydraulic oil flow to auxiliary lines over general machine services. If a machine is left in this mode and then an operator tries to dig, the machine may feel underpowered and sluggish.

SY135C QUICK START GUIDE


QUICK HITCH PROCESS (PT 1)



1. Select Main Menu Icon


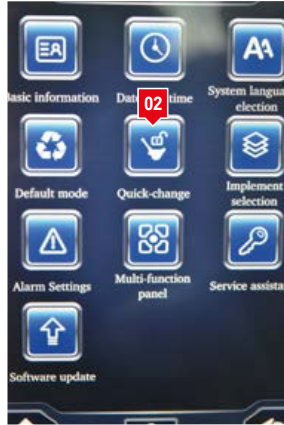


2. Select Quick Change

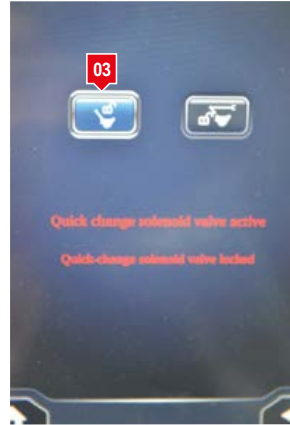

3. Select Unlock Icon
(Buzzer will sound)

QUICK HITCH PROCESS (PT 2)

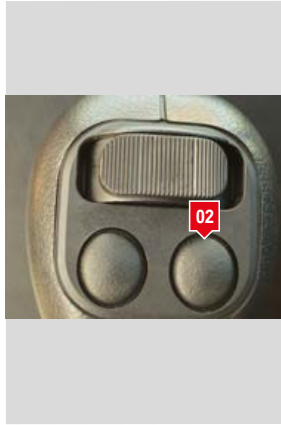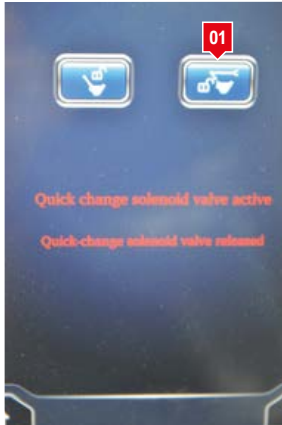

1. Select Bucket Removal Icon.
2. Select right hand button on left hand lever control and press throughout the entire detachment process.
3. Crowd the bucket fully in to allow the bucket to detach. Whilst still pressing the button, connect the next attachment.


Note: Please be aware that the Quick Hitch process may vary if a third party attachment system is fitted.

SY135C QUICK START GUIDE


TOOL SELECTION



1. Select Main Menu Icon

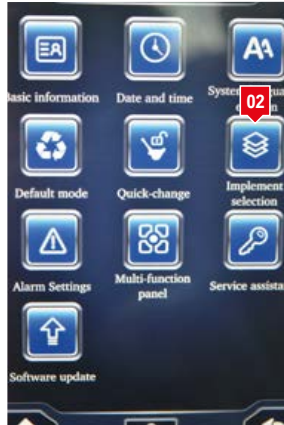

2. Select Implement Selection icon

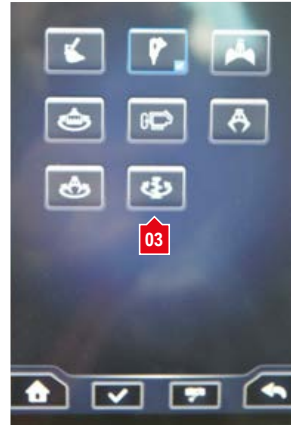


3. Select required attachment from the menu

1. Bucket
2. Breaker
3. Grab/Clam shell
4. Rotator grab
5. Flail
6. Grapple
7. Grapple with rotate
8. Auger


SY135C QUICK START GUIDE

EMERGENCY STOP SWITCH

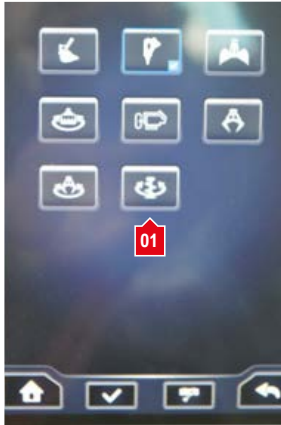


1. Select the required tool from the menu

Left Lever

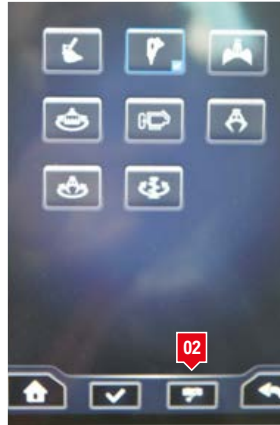

2. Select Tool Set Up

Right Lever

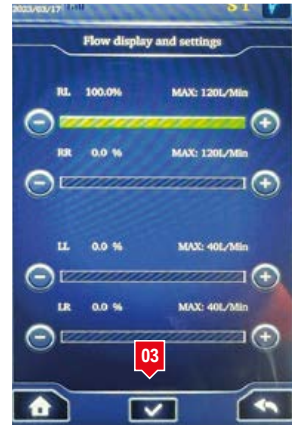

3. SET UP

RL & RR = High Flow
(Breaker Lines)

LL & LR = Low flow
(Rotation Lines)

Press +/- icons to increase
or decrease flow on desired
circuit.

Press Tick Icon to save settings

OPERATION

LL = Left lever slide left

LR = Left lever slide right

RL = Right lever slide left

RR = Right lever slide right

*Figures on the display screen are a guide. All flows should be verified using a flow meter when the attachment is installed.

EXHAUST REGENERATION

01



1. The machine will run an auto regen as required to clear soot from the exhaust system.

For the regen to commence the machine must meet certain parameters with regards to temperature.

When the Auto Regen light illuminates continue to work the machine normally until the regen has completed.

2. A regen can be inhibited in the event that carrying out the process with high exhaust temperatures may cause a health and safety concern, for example the machine is working next to flammable material.

To inhibit the regen select the Main Menu and then select the multi-function panel.

02



SY135C QUICK START GUIDE

EXHAUST REGENERATION



1. Select the Regen Inhibit icon and then select Escape.



2. The regen will stop and the Regen Inhibit light will illuminate on the display.

The machine can now be moved to a safe area to allow the process to continue.

*DO NOT inhibit regens unnecessarily.

*All inhibits are recorded within the machine ECU.

*Multiple inhibits will lead to a service regen being required or may result in damage to the exhaust system. Damage caused in this way is NOT covered by warranty.

SY135C QUICK START GUIDE

MANUAL REGENERATION

Manual regeneration is only available if the machine requests one. The Manual Regen light will flash in the top right corner of the display. It will only do so if automatic regenerations have been inhibited or cancelled.



1. To carry out a manual regen the machine must be up to operating temperature.

The safety lever must be down.

The throttle dial must be on 1.

Select the Main Menu icon.

Select the Multi-Function icon.

2. Select the Manual Regen button.

The machine will now run through the process automatically.

3. The Manual Regen light will stay illuminated throughout the process.

DO NOT leave the machine unattended.

DO NOT select any services or operate the machine.

DO NOT open the bonnet. Exhaust temperatures may be in excess of 700 degrees centigrade.

SY135C QUICK START GUIDE

SERVICE INTERVALS GUIDE

Regular inspection	Maintenance Work	I	C	R	L	A
Daily Inspection	Water build-up in the Fuel System	I	C			
	Engine Oil	I	C			A
	Lubrication Points	I			L	
Every 250hrs	Engine Oil	I				A
	Air Filter	I	C			
	Climate Control	I	C			
Every 500hrs*	Air Filter			R		
	Engine Oil			R		
	Swing Motor Oil	I				A
	Final Drive Motor Oil	I				A
	Slewing Gear				L	
	Fuel Filter			R		
	Fuel Pre-filter			R		
	Radiator Cooling Fins	I	C			A
Every 1000hrs	Hydraulic Hose Connections	I				
	Hydraulic Oil Return Filter			R		
	Hydraulic Pilot Oil Filter			R		
	Fan Belt / Aux Belt	I	C			A
	Final Drive Motor Oil			R		
	DEF Tank Filter			R		
	DEF Pump Filter			R		
Every 2000hrs	Swing Motor Oil			R		
	Fan Belt/Aux Belt			R		A
	Coolant					
	Hydraulic Oil Suction Filter	I	C			
	Alternator	I				
	Starter	I				
Every 4000hrs	Valve Play, Engine	I				A
	Water Pump	I				
	Hydraulic Oil Suction Filter			R		
	Hydraulic Oil**			R		
Every 6yrs	Hydraulic Pipes			R		
Every 10,000hrs	SANY Service					
Check	Maintenance Work	I	C	R	L	A
As required	Air Filter	I	C	R		
	Coolant	I		R		
	Radiator Cooling Fins		C			
	Air Conditioning System Coolant	I				A
	Track Tension	I				A
	Track Shoes Fastening	I				A
	Bucket	I		R		A
	Bucket Teeth	I		R		
	Roof Hatch Gas Spring	I		R		

SY135C QUICK START GUIDE

SERVICE INTERVALS GUIDE

Maintenance Steps	After (hr)			Every (hr)									
	50hrs	100hrs	500hrs	8hrs	50hrs	100hrs	200hrs	250hrs	500hrs	1000hrs	2000hrs	2500hrs	4000hrs
Final Drive Motor Oil										R	R		R
Boom Swing Pin						L	L			L			
Boom Swing Cylinder Pin						L	L			L			
Boom Pins				L	L	L				L			
Boom Socket-head Bolts				L	L	L				L			
Boom / Arm Connecting Pin				L	L	L				L			
Arm Cylinder Pin				L	L	L				L			
Arm / Bucket Connecting Pin				L	L	L				L			
Bucket Socket-head Pins				L	L	L				L			
Slewing Gear					L	L				L			
Slewing Ring Raceway						L	L			L			
Blade Pin					L								
Blade Cylinder Pin					L	L				L			
Door Pin					L	L				L			
Track Tensioner					I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A

* First 500hrs all oils and filters changed except Hydraulic oil

** Hydraulic oil must be changed at 2000hrs if used with attachments

Service Refill Capacities	
Fuel Tank	245 l
Engine Coolant	23.6 l
Engine Oil	15 l
Drive Motor (per side)	1.8 l
Adblue	20 l
Hydraulic Oil Tank	140 l

KEY	
Inspect	I
Clean	C
Replace	R
Lubricate	L
Adjust	A

Machine Dimensions	
Overall Length	7,500 mm
Overall Width (700mm tracks)	2,690 mm
Overall Width (600mm tracks)	2,590 mm
Overall Width of Superstructure	2,490 mm
Overall Height above Cab	2,820 mm

SANY

FORGING THE FUTURE TOGETHER

Not all products are available in all markets. As part of our continuous improvement process, we reserve the right to modify specifications and designs without giving prior notice. Machines shown may feature additional options other than the standard machine specification.

VERSION 1 08.2026